



XConsole Firmware Upgrade Manual September 2010.

XConsole is compatible with Microsoft XP, Vista and Windows 7.


The software will also work if using Boot camp on a Mac.

IMPORTANT NOTES:

- Now that connection has been established between the computer USB and the Xilica device, it is possible to upgrade the unit's firmware.
The latest version can always be found within the download section of the Xilica website - www.xilica.com
- **WARNING:** Upgrading the unit's firmware will erase all presets so please make sure you export all presets to a PC before commencing with the upgrade.
- After the firmware upgrade, presets can be loaded back in to the device.


FIRMWARE UPGRADE:

To begin the upgrade, ensure that you are connected to the device, click “Upgrade” and then select “Firmware”.

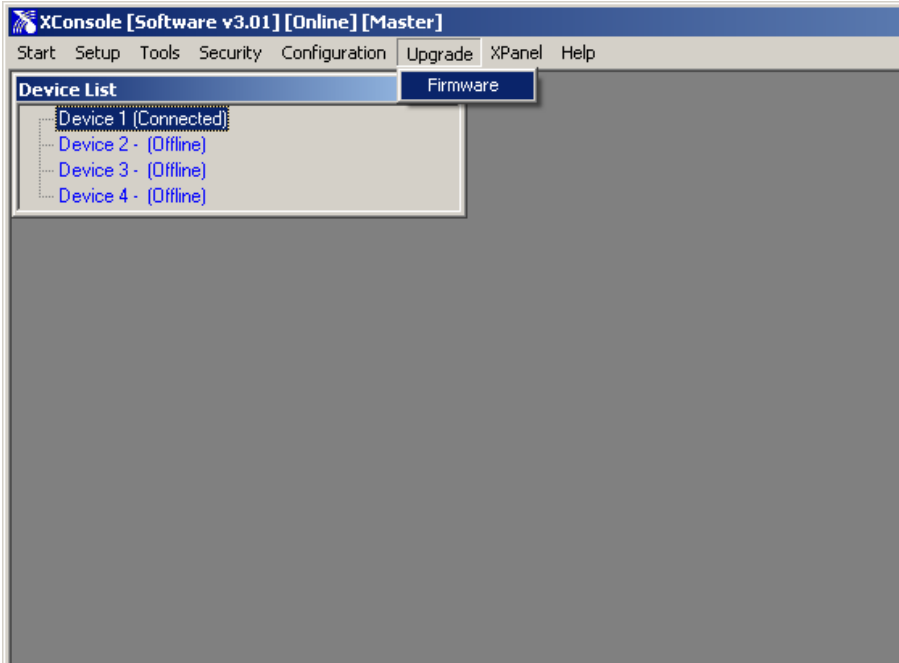

Two pop-up screens will appear that need to be confirmed by clicking “Yes”. After accepting these, you will be asked for the location of the firmware to be used in the upgrade.

Browse to the location and select the required .img or image file.

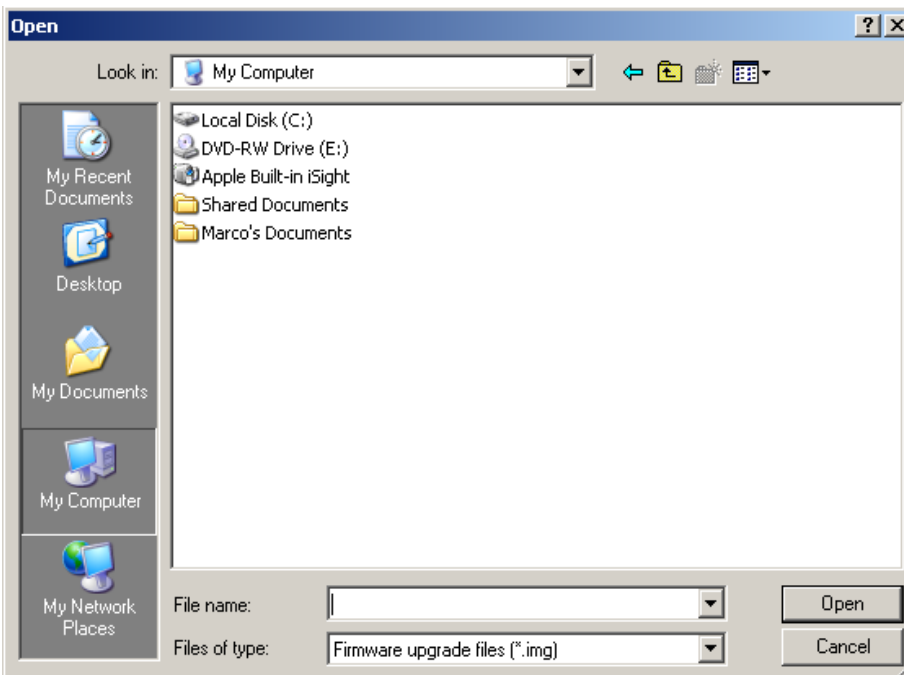

In the bottom right corner of the main screen a progress bar will appear.
 When the upload is finished, you will be prompted to switch the unit OFF and then ON again.
 This is necessary so that the device's EPROM can be reprogrammed with the new Firmware.



WARNING: Do not interrupt this process, it may cause damage to the EPROM.